 


Instructions and Cautions for Safe Use of Regenerative Resistor GRZG Series

This installation guide explains only cautions for safe use of regenerative resistor GRZG series. For details of the storage, operating environment, installation, wiring, setting, and disposal, refer to each servo amplifier instruction manual.



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG MARUNOUCHI TOKYO 100-8310

This installation guide uses recycled paper. Specifications are subject to change without notice.

IB(NA)0300259-A(1408)MEE

Printed in Japan