

Before Using the Product

Please read this document before use. Keep the document in a safe place for future reference. Make sure that the end users read the document.

1. Relevant manuals

Before using the product, please read "Safety Guidelines" that is supplied with the CPU module or head module.

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- WARRANTY

Details of the product are also described in the manual shown below (sold separately).

Please read the manual and understand the functions and performance of the product to use it correctly.

- MELSEC-L Temperature Control Module User's Manual SH-081000ENG (13JZ64)

1. Manuels correspondants

Avant d'utiliser ce produit, prière de lire les "Safety Guidelines" (directive de sécurité) fournies avec l' le module de CPU ou module de tête, en particulier dans les sections suivantes.

- PRÉCAUTIONS DE SÉCURITÉ
- CONDITIONS D'UTILISATION DE PRODUIT
- DIRECTIVES CEM ET BASSE TENSION
- GARANTIE

2. Packing list

Check that the following items are included in the package.

Item	Quantity
Module	1
"Before Using the Product" (this document)	1

3. Information and services


For further information and services, please consult your local Mitsubishi representative.

4. Wiring diagrams


Schémas de câblage

◆ L60TCTT4, L60TCTT4BW

<Temperature input mode>

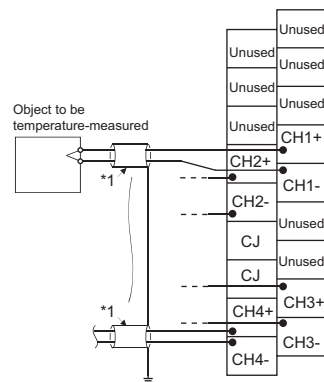


<Temperature control mode>

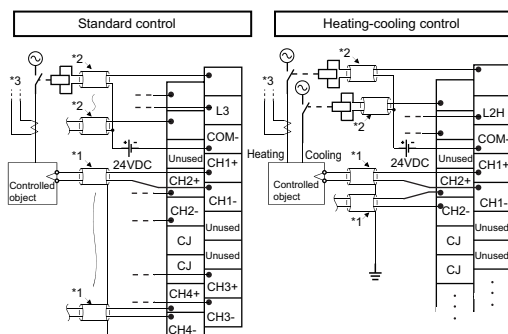


◆ L60TCRT4, L60TCRT4BW


<Temperature input mode>

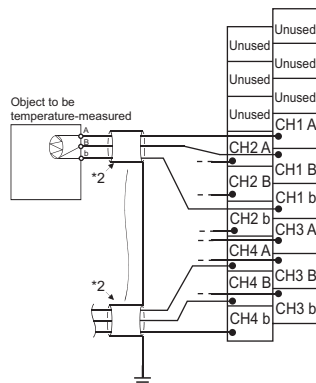

<Temperature control mode>

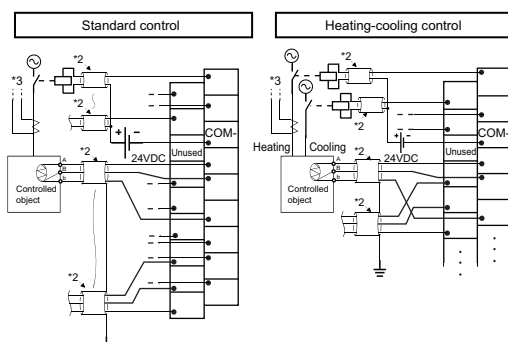

- *1 Please use shielded compensation conductors.
- *2 Always use shielded cables.
- *3 Connect current sensors (CT) to the terminal blocks of the L60TCTT4BW or L60TCRT4BW as the following figure.

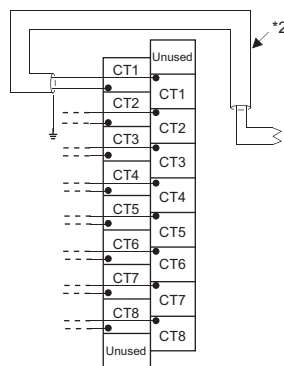

English	French
Standard control	Contrôle standard
Heating-cooling control	Contrôle réchauffage-refroidissement
Controlled object	Objet à contrôler
Heating	Réchauffage
Cooling	Refroidissement
Unused	Inutilisé
Temperature input mode	Mode entrée de température
Object to be temperature-measured	Objet dont on mesure la température
Temperature control mode	Mode contrôle de température

English	French
Please use shielded compensation conductors.	Utiliser des conducteurs blindés compensés.
Always use shielded cables.	Toujours utiliser des câbles blindés.
Connect current sensors (CT) to the terminal blocks of the L60TCTT4BW or L60TCRT4BW as the following figure.	Raccorder les capteurs de courant (CT) aux plaques à bornes du L60TCTT4BW ou L60TCRT4BW comme illustré ci-après.

5. Wiring products

The table below shows applicable solderless terminals connected to the terminal block. When wiring, use applicable wires and an appropriate tightening torque. Use UL Listed solderless terminals and, for processing, use a tool recommended by their manufacturer. Also, sleeved solderless terminals cannot be used.

Model	Tightening torque	Wire			
		Diameter	Type	Material	Temperature rating
R1.25-3	0.42N·m to 0.58N·m	AWG22 to AWG18	Stranded	Copper	75°C or more

5. Produits pour câblage

Le tableau ci-dessous indique quelles bornes sans soudure on doit utiliser pour les raccordements sur la plaque à bornes. Pour le câblage, utiliser les fils et couples de serrage prescrits. Utiliser les bornes sans soudure répertoriées par UL et, pour le montage, utiliser l'outil recommandé par le fabricant de ces bornes. En outre, il ne faut pas utiliser de bornes sans soudure sous manchon.

Borne sans soudure		Fil			
Modèle	Couple de serrage	Diamètre	Type	Matériau	Gamme de température
R1.25-3	0,42N·m à 0,58N·m	AWG22 à AWG18	Torsadé	Cuivre	75°C ou plus

6. Installation of the unit

Consider ease of operation, maintainability, and resistance to adverse environmental conditions when installing the product in a control panel, etc. All units in the MELSEC-L series must be connected as a system using DIN rail connection.

Also refer to the LCPU User's Manual (Hardware Design, Maintenance and Inspection) for details of installation.

6. Installation de l'unité

Prendre en considération la commodité d'exploitation et de maintenance, ainsi que la bonne résistance aux facteurs environnementaux adverses lors de l'installation en tableau de commande, etc.

Toutes les unités de la série MELSEC-L doivent être connectées en un système de connexion par rails DIN.

Pour le détail de l'installation, voir aussi le "LCPU User's Manual (Hardware Design, Maintenance and Inspection)" (le Manuel de l'utilisateur LCPU (conception du matériel, maintenance et inspection)).

7. Operating ambient temperature

Use the product within the range from 0°C to 55°C.

7. Température ambiante de fonctionnement

Ce produit doit être utilisé entre 0 et 55°C.